


THE ARK - DIVIDED ROOM - HVN#1025

ASSEMBLY INSTRUCTIONS

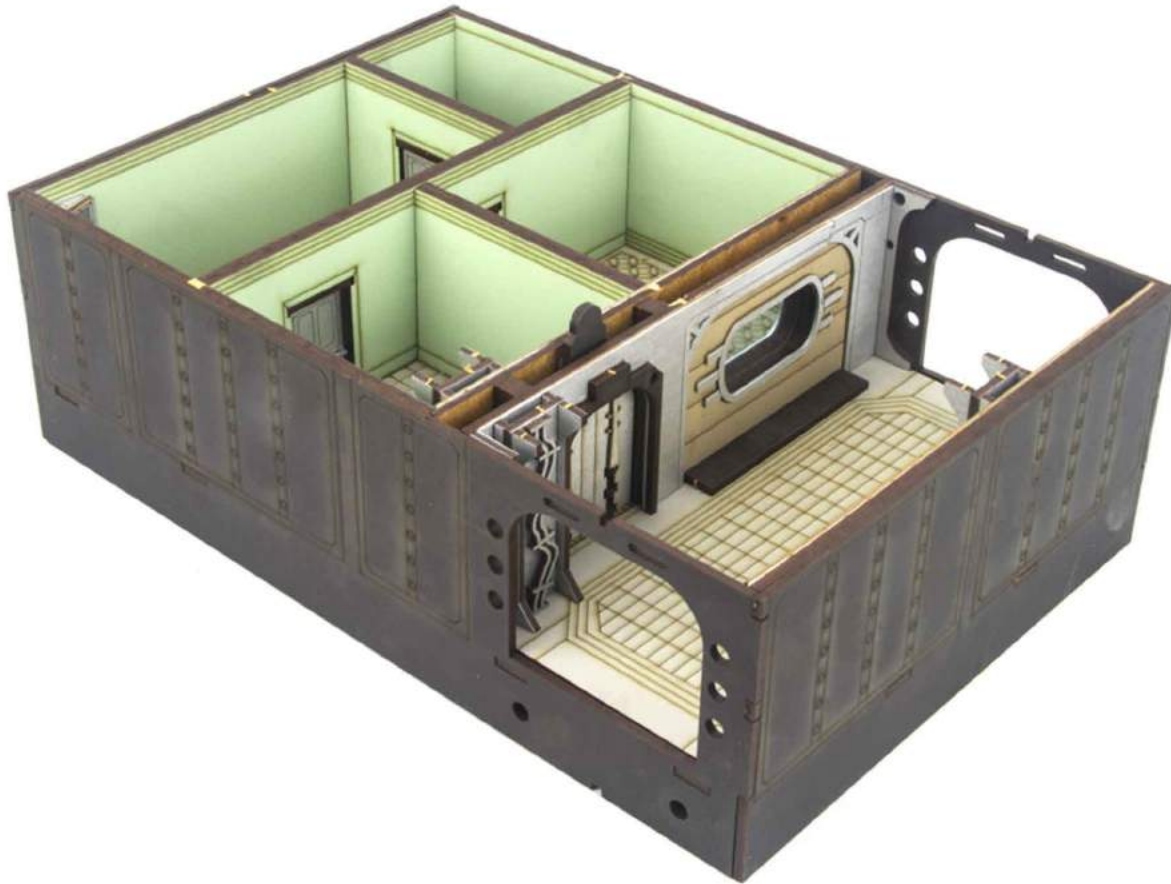

Before starting this kit, make sure you read through all the instructions carefully. Always remember to dry fit parts and sand as needed.

We use two kinds of glue when assembling our kits. Super glue (cyanoacrylate) or PVA glue.

You can repaint or weather our kits easily! The paint we use is a great base primer and will take paint nicely.

If you have any issues during assembly, please contact us and we'll always help!

We would like to take the time to thank you for purchasing a Black Site Studios product!

www.blacksitestudio.com

WE SUGGEST HAVING THESE TOOLS ON HAND



IMPORTANT SYMBOLS YOU'LL FIND ON YOUR JOURNEY



ATTENTION



DRY FIT



NO GLUE







GLUE



TRIM/SAND


THE ARK - DIVIDED ROOM - HVN#1025

PAGE 1

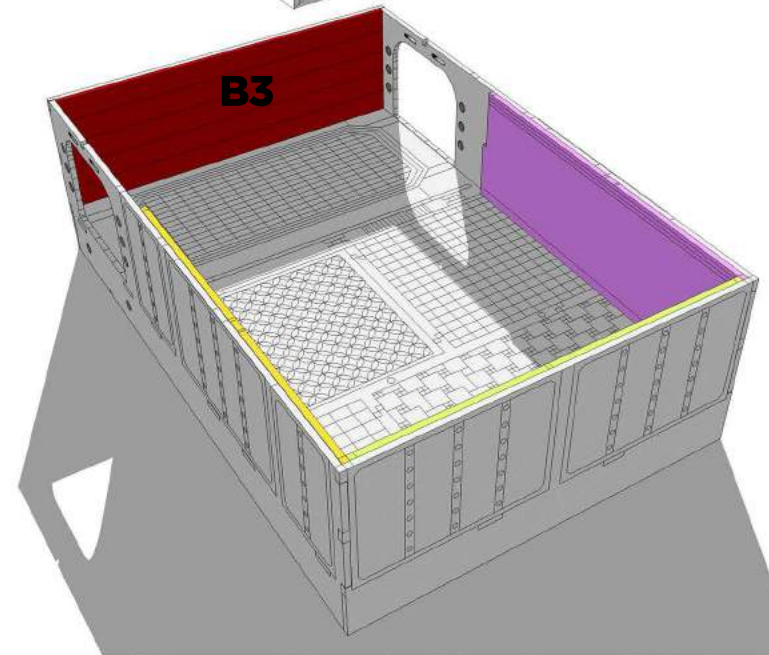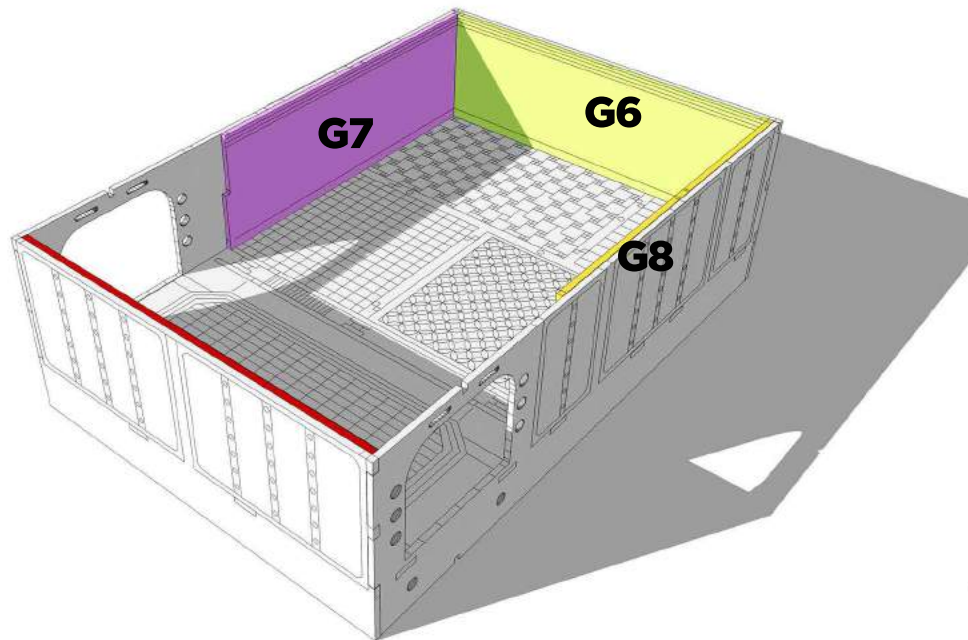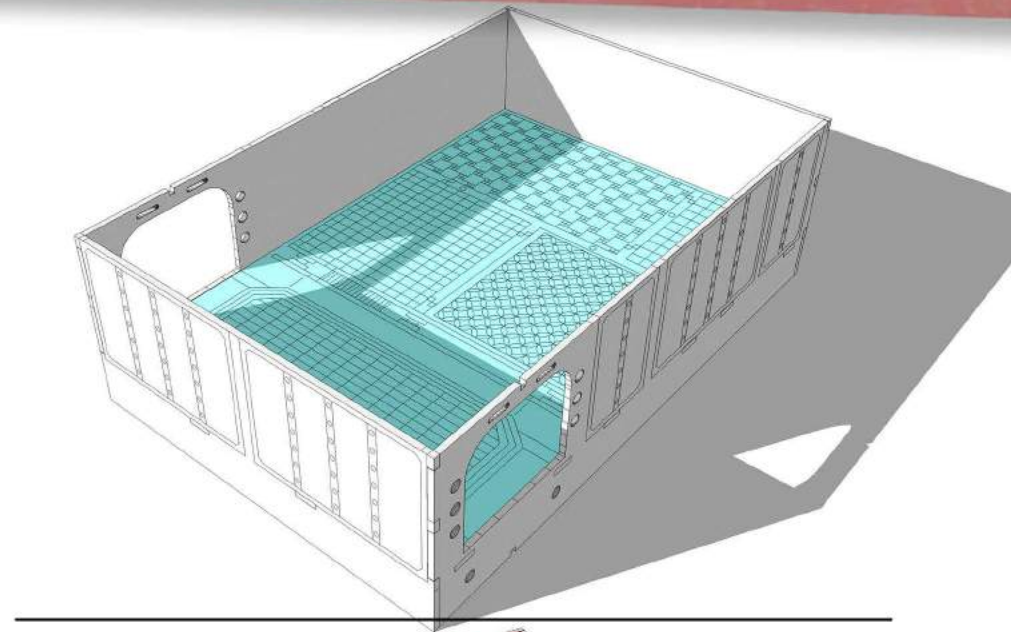
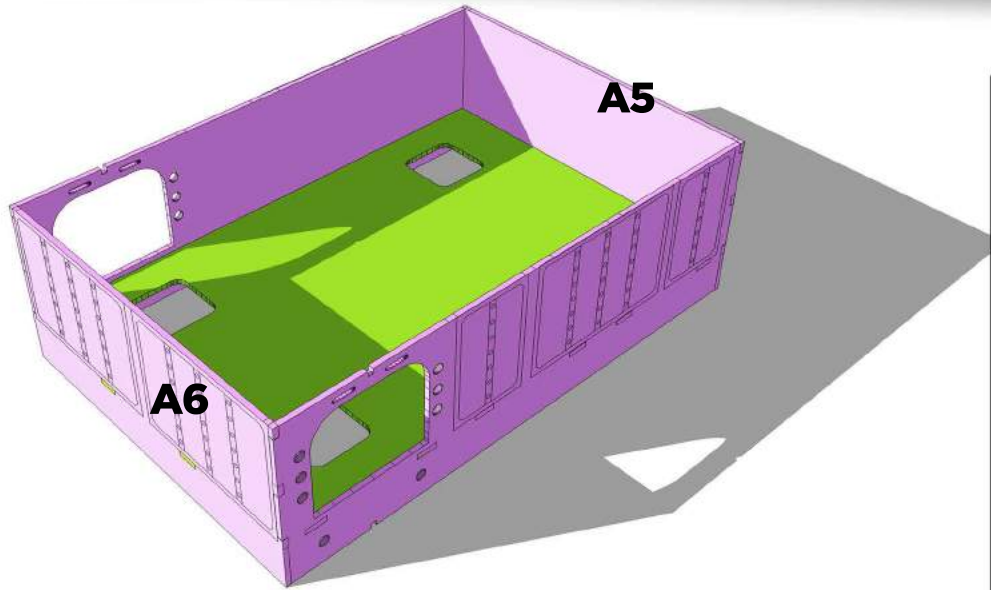


THE ARK - DIVIDED ROOM - HVN#1025


PAGE 2

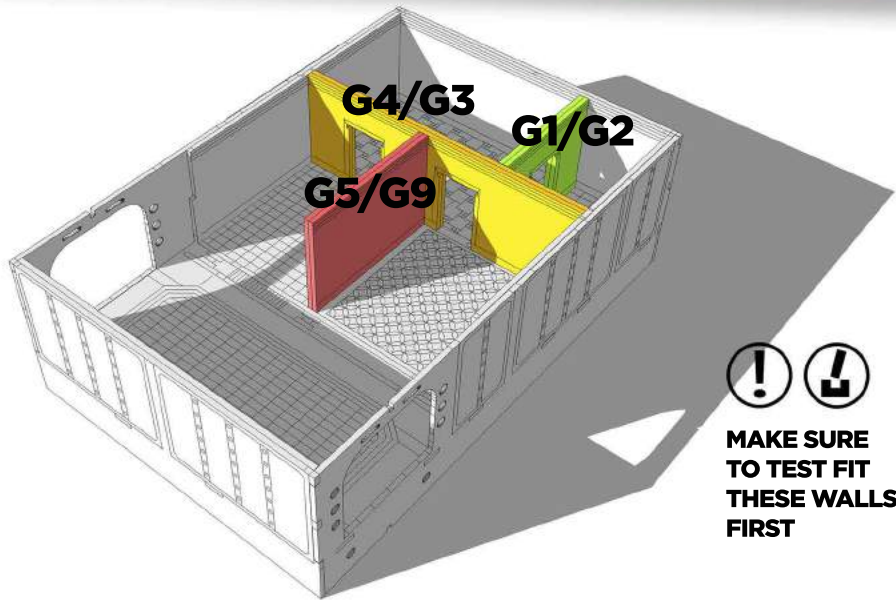

**MAKE SURE
TO TEST FIT
THESE WALLS
FIRST**

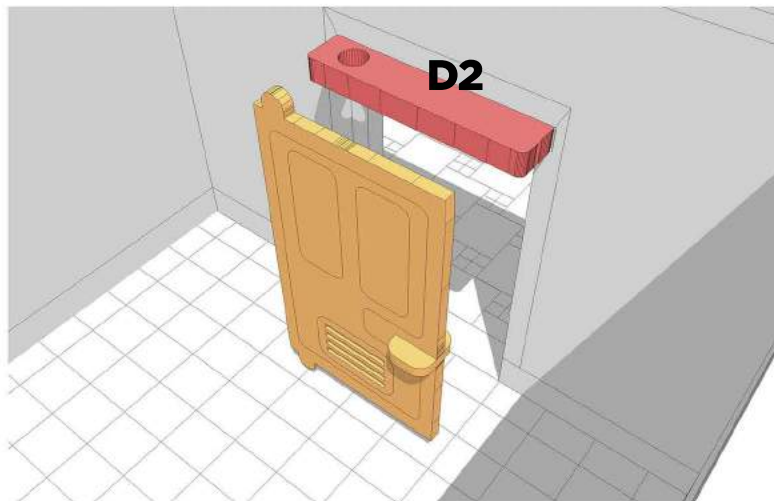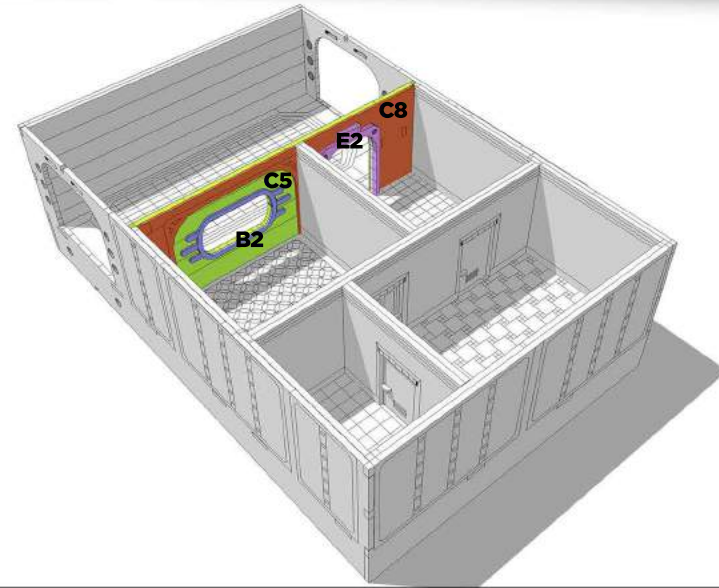


**DONT GLUE THE DOORS IN
THEYRE DESIGNED TO OPEN
AND CLOSE.**

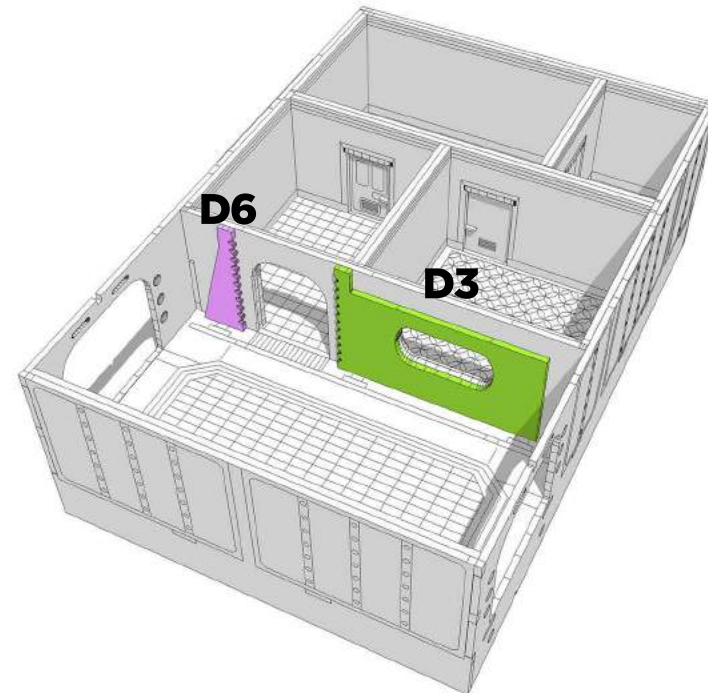


THE ARK - DIVIDED ROOM - HVN#1025




PAGE 3

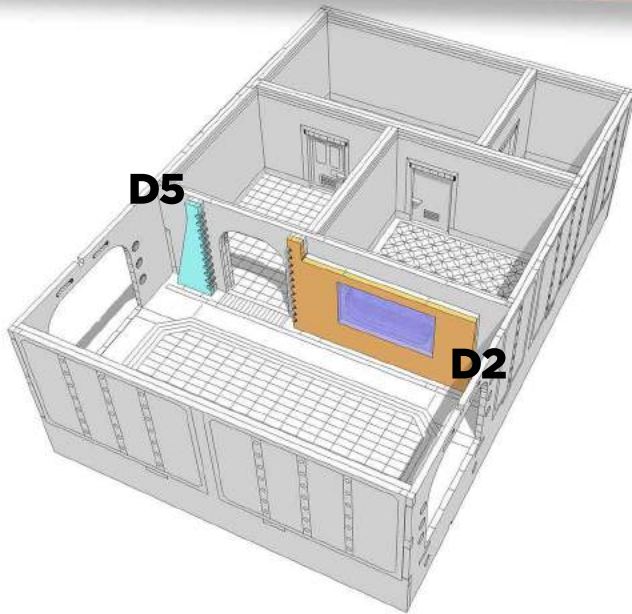

PLACE THE ACRYLIC
INSERT INSIDE SQUARE
HOLE. MAKE SURE TO
PEEL OFF THE PAPER
FIRST. YOU DONT NEED
GLUE FOR THIS PART.



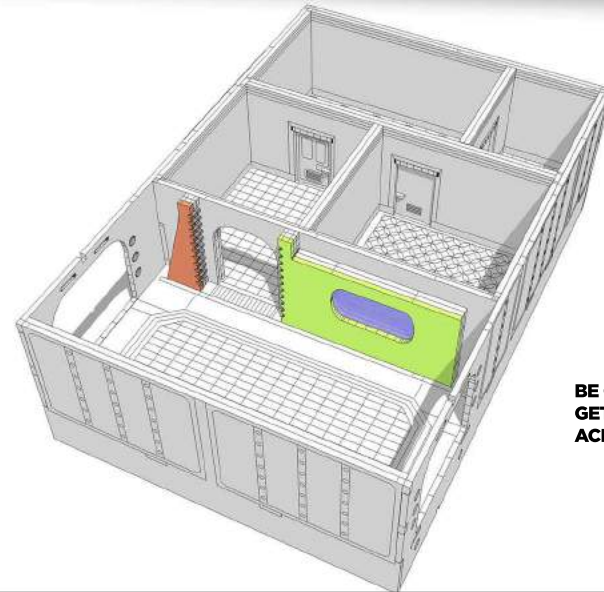


BE CAREFUL NOT TO
GET ANY GLUE ON THE
ACRYLIC.

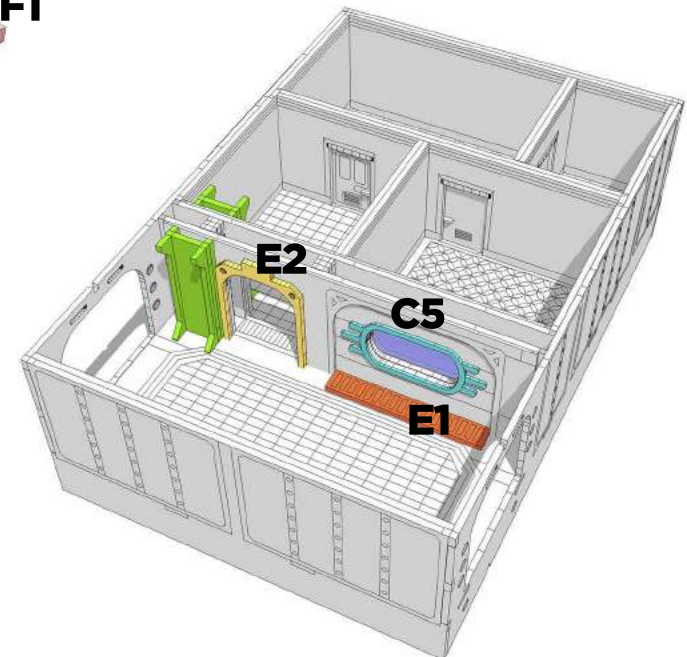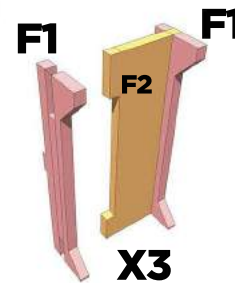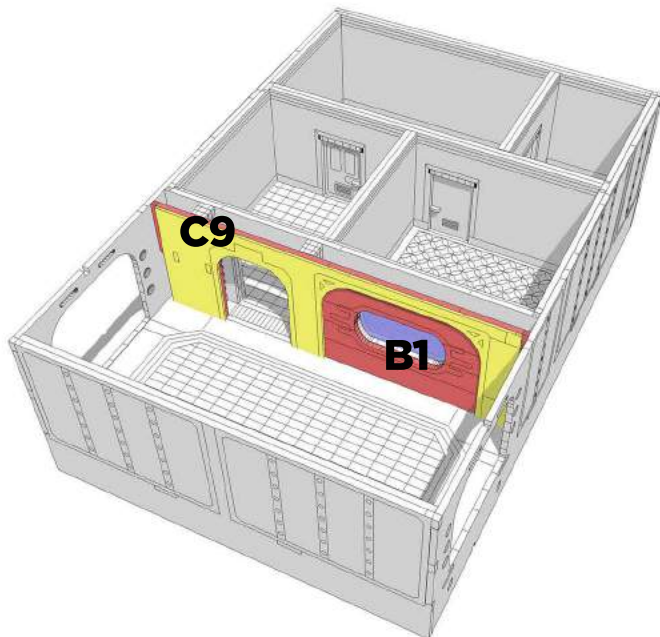

THE ARK - DIVIDED ROOM - HVN#1025

PAGE 4

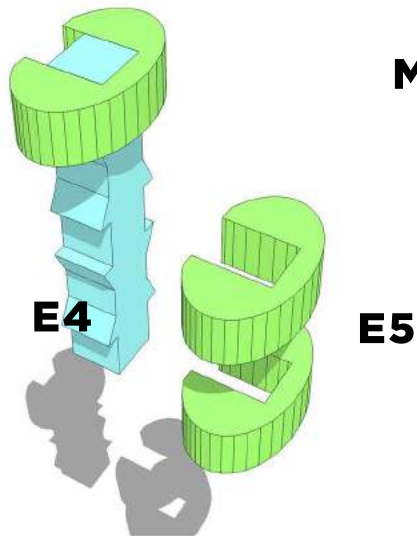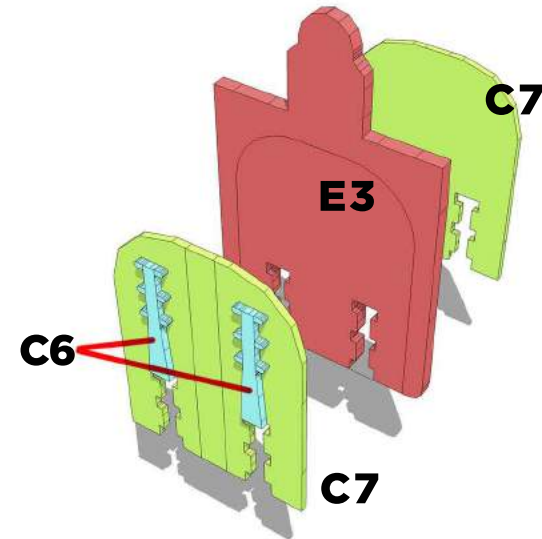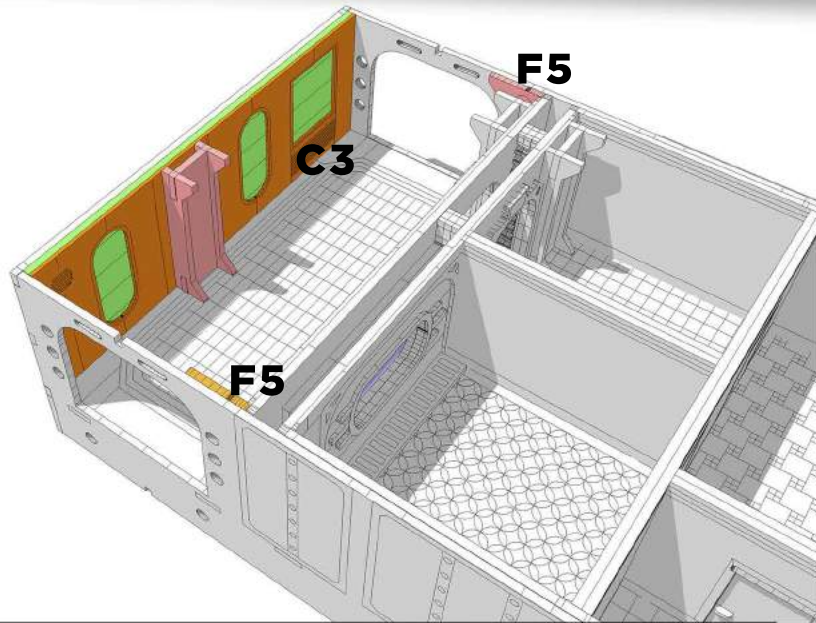



MAKE X2

CAREFULLY SLIDE THE
CONSTRUCTED PART
INTO THE GAP PROVIDED
IN THE DOOR.



MAKE SURE TO POSITION IT CLEANLY
IN THE MIDDLE. OTHERWISE IT WILL
PREVENT THE DOOR BEING REMOVED

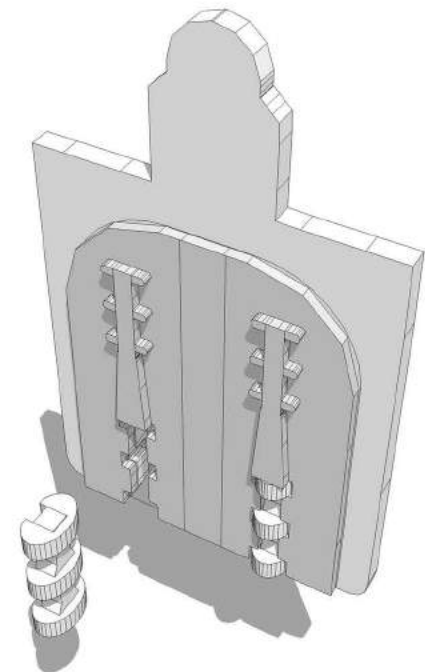

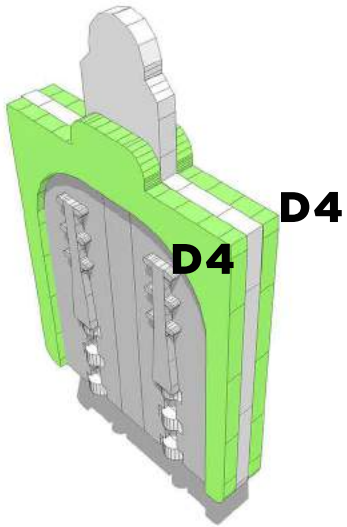

**SLIDE THE DOOR
DOWN INTO THE
OPENING.**

