


# CORMORANT CLASS FREIGHTER

## ASSEMBLY INSTRUCTIONS

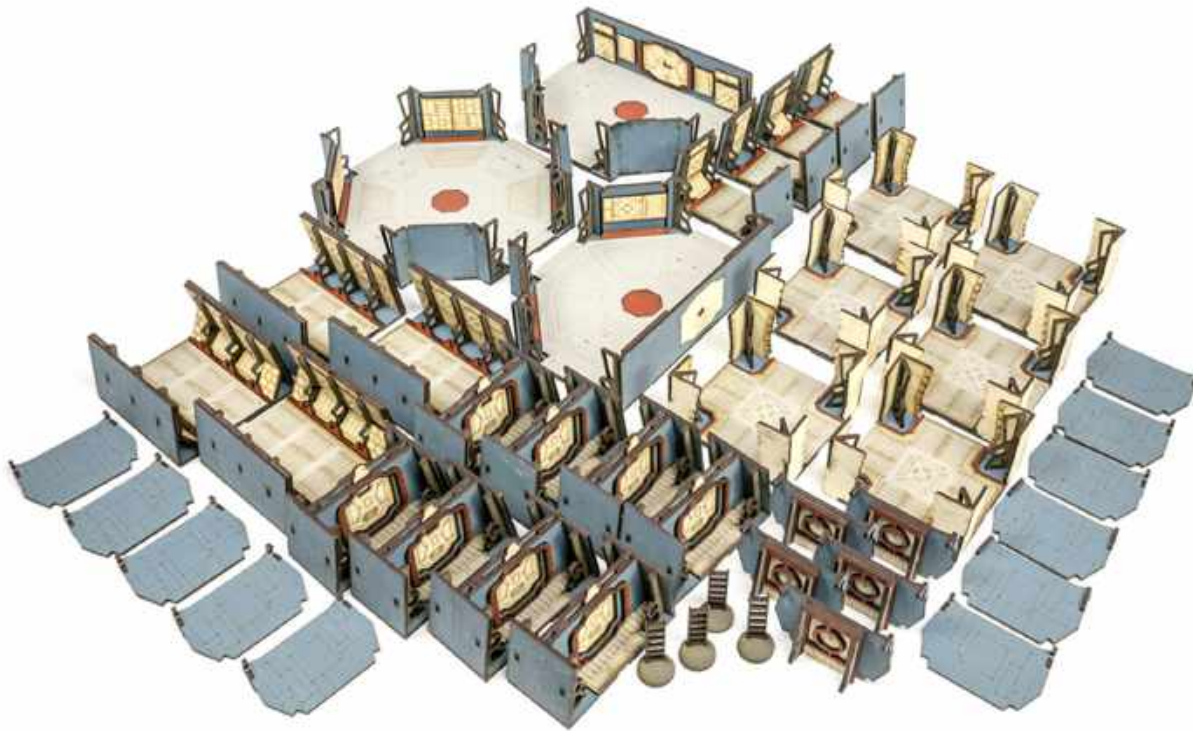

**Before starting this kit, make sure you read through all the instructions carefully.** Always remember to dry fit parts and sand as needed.

**We use two kinds of glue when assembling our kits. Super glue (cyanoacrylate) or PVA glue.**

**You can repaint or weather our kits easily! The paint we use is a great base primer and will take paint nicely.**

**If you have any issues during assembly, please contact us and we'll always help!**

**We would like to take the time to thank you for purchasing a Black Site Studios product!**

**[www.blacksitestudio.com](http://www.blacksitestudio.com)**

### WE SUGGEST HAVING THESE TOOLS ON HAND



### IMPORTANT SYMBOLS YOU'LL FIND ON YOUR JOURNEY



ATTENTION



DRY FIT



NO GLUE





GLUE



TRIM/SAND



# CORMORANT CLASS FREIGHTER

PAGE 1

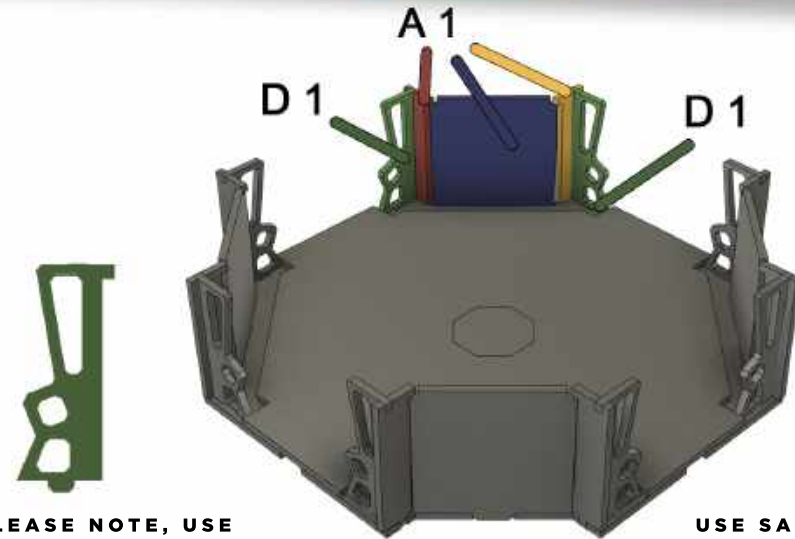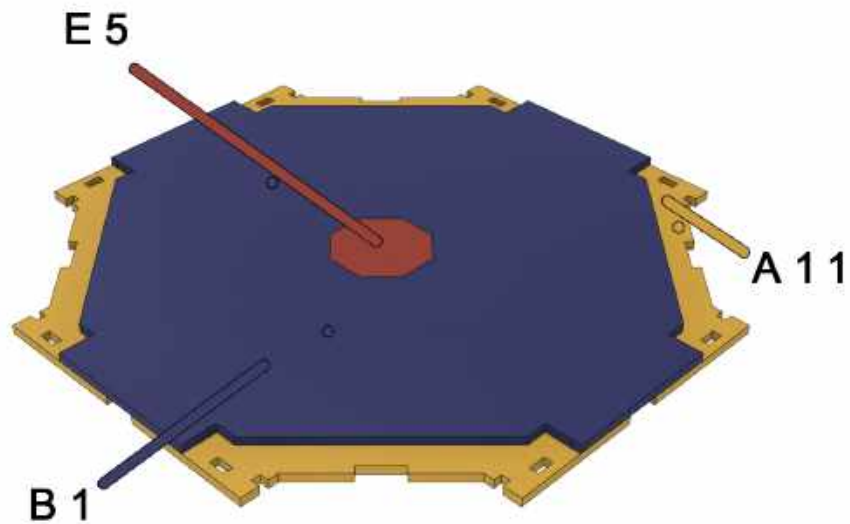





PLEASE NOTE, USE  
PART D1 WITH THE TOP  
TAB

USE SAME STEPS FOR  
ALL 4 WALL SECTIONS  
ON THIS ROOM.

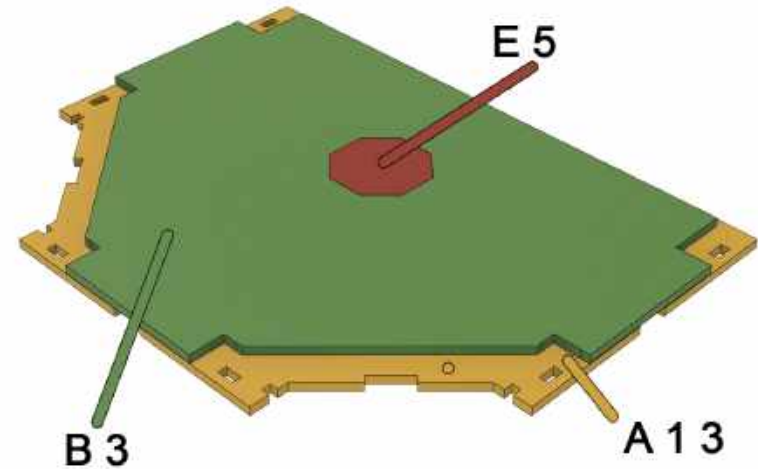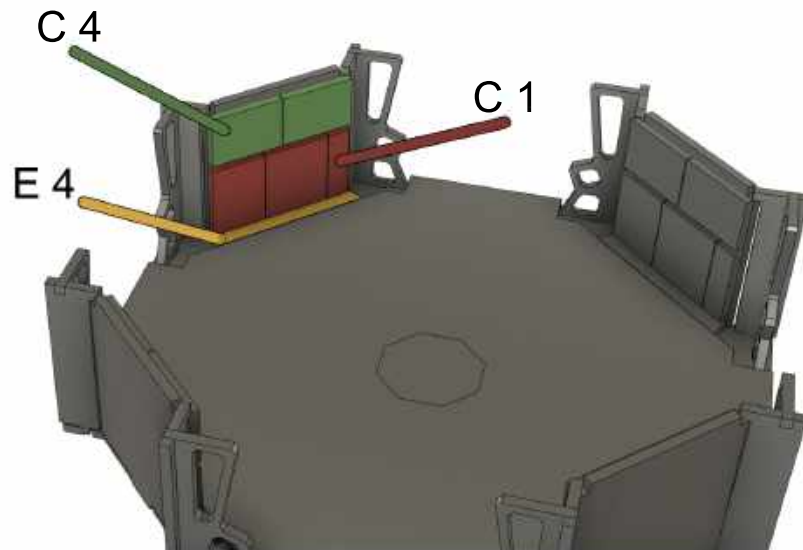

# CORMORANT CLASS FREIGHTER



PAGE 2

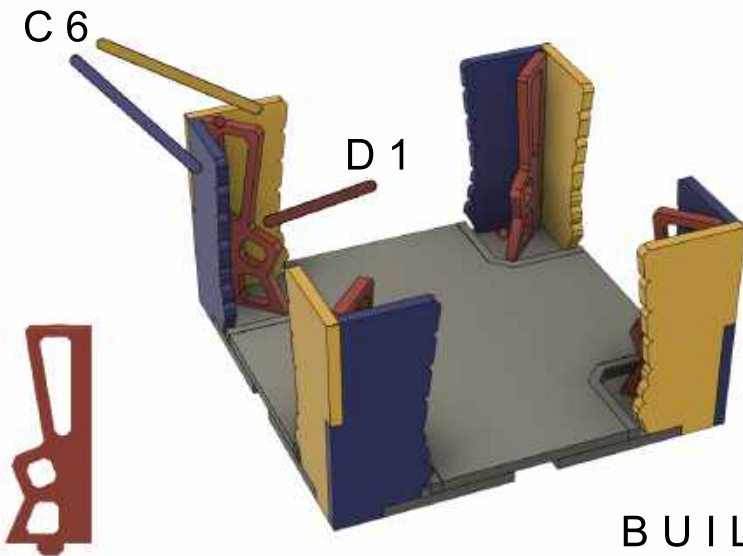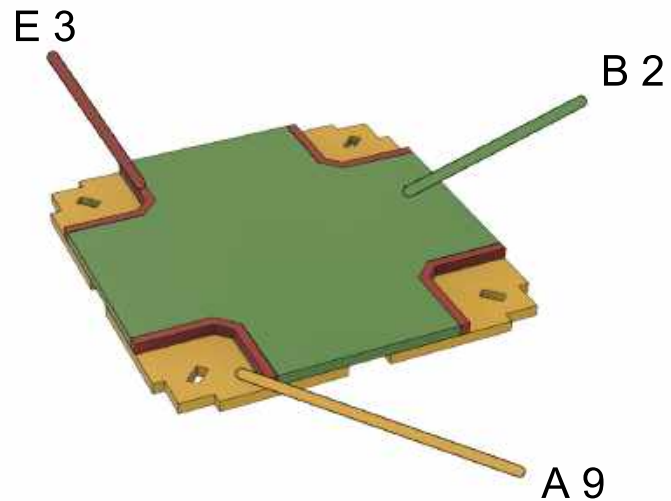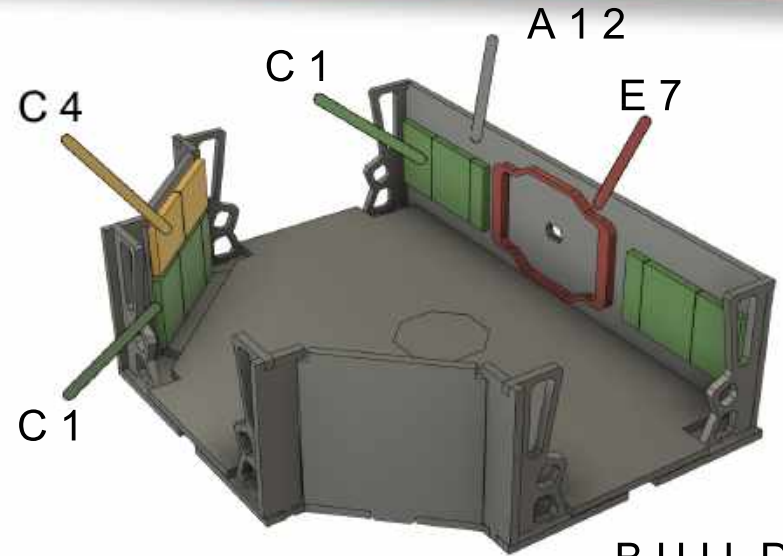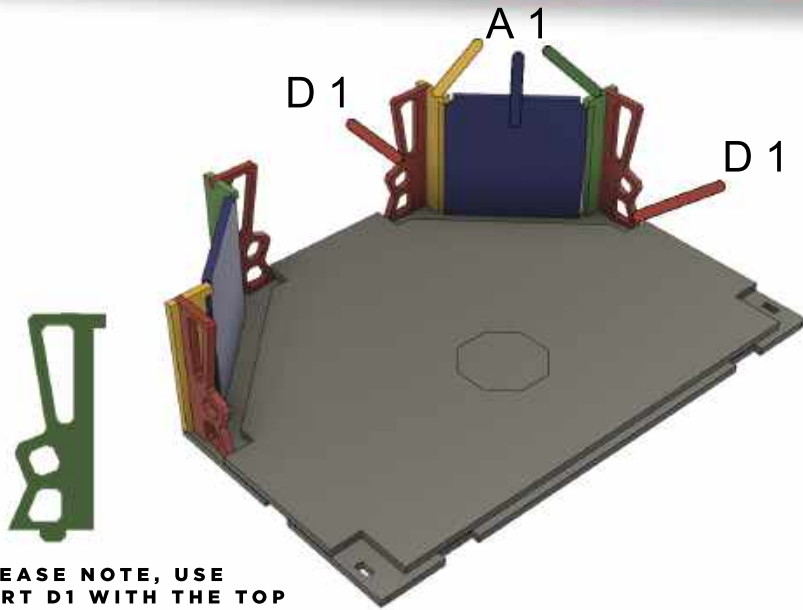





# CORMORANT CLASS FREIGHTER

PAGE 3

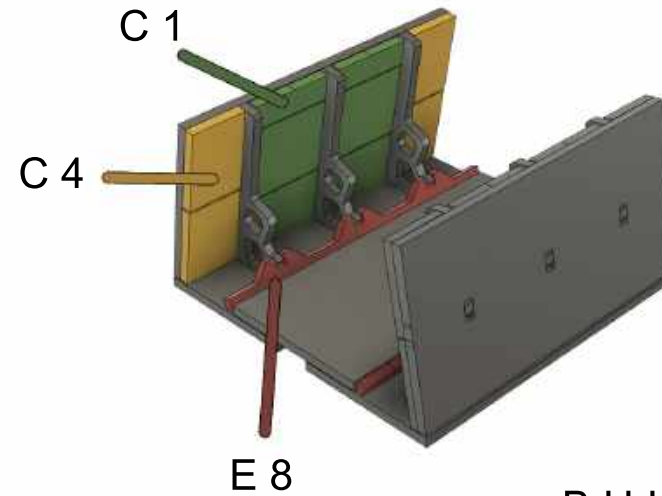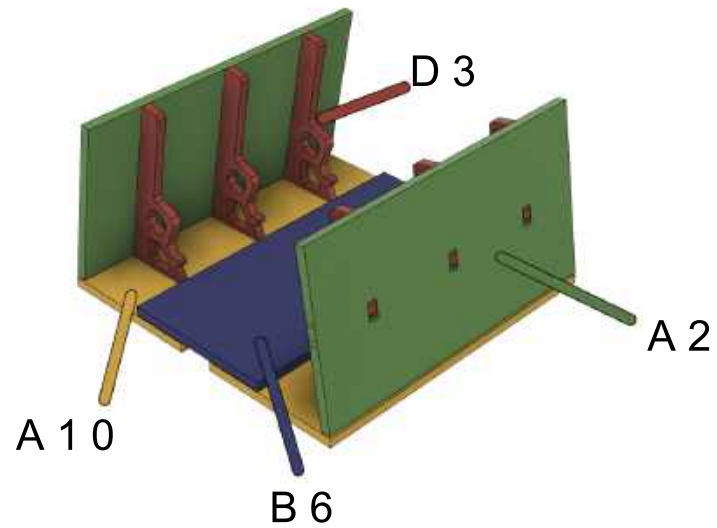





BUILD X4

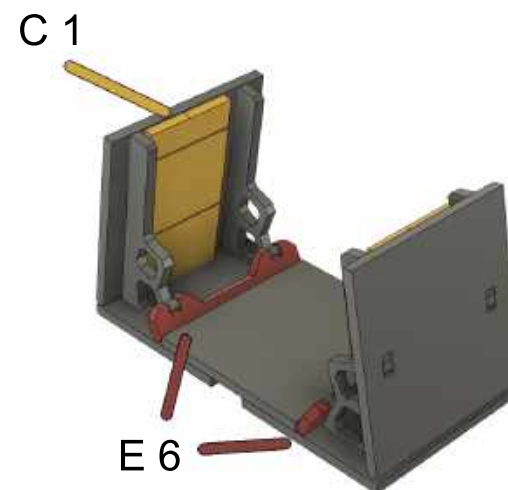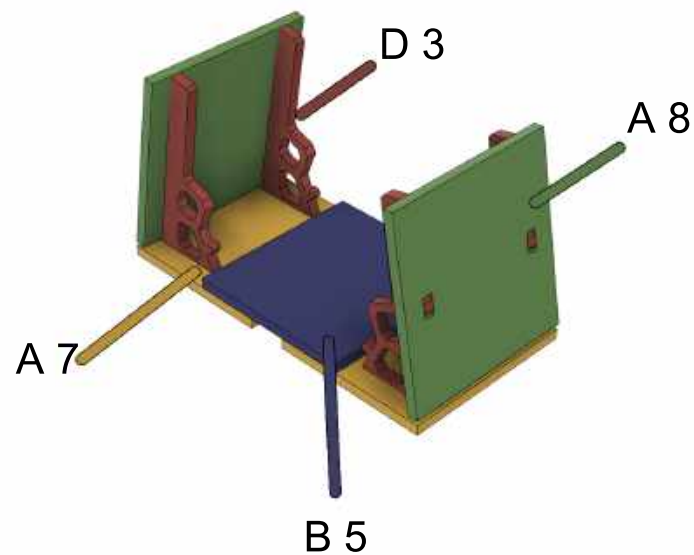

BUILD X4

# CORMORANT CLASS FREIGHTER

PAGE 4

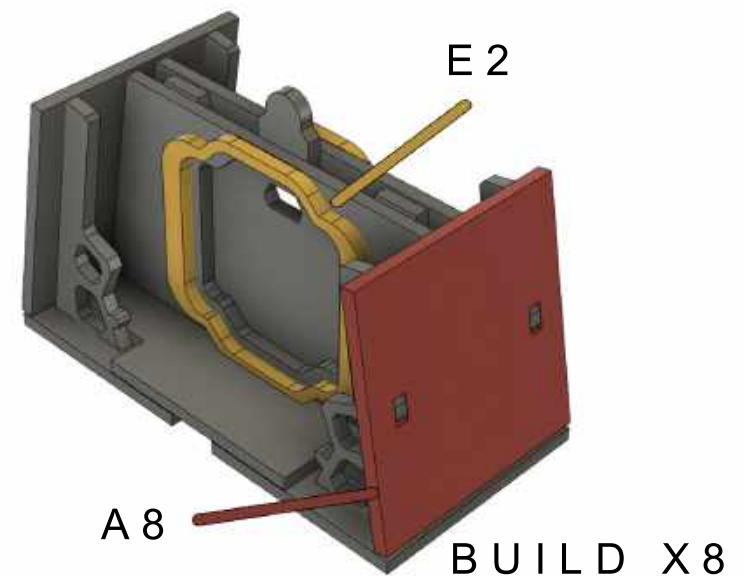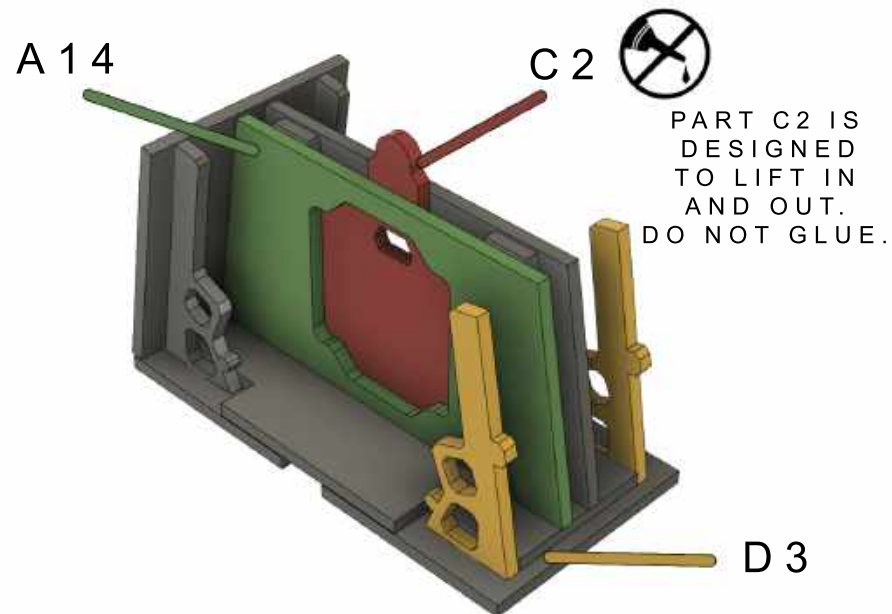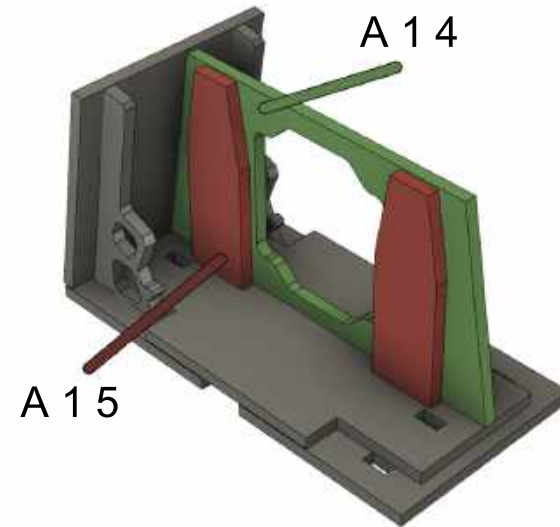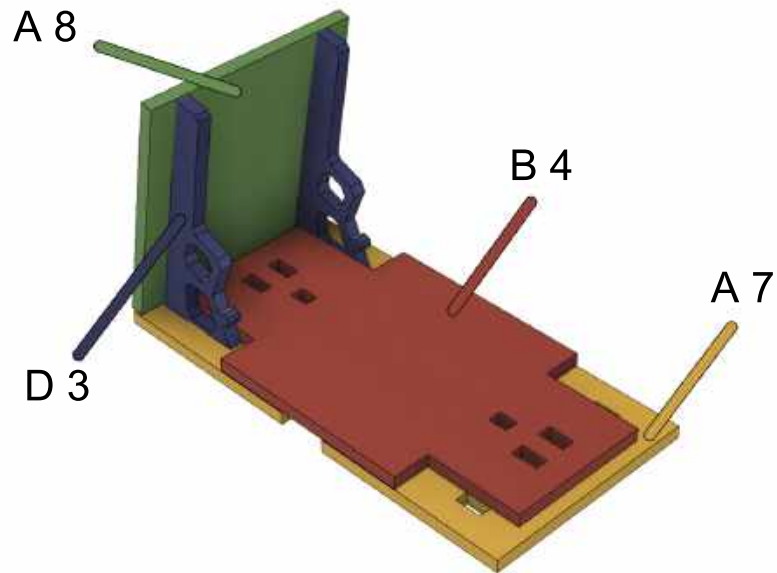

# CORMORANT CLASS FREIGHTER

PAGE 5

